

# ROCK

ENGLISH

## ACTIVE NOISE CANCELLING EARBUDS WIRELESS BUDS + MAGNETIC CHARGING CASE

### ANC

Active Noise Cancelling technology reduces unwanted ambient sounds for an optimum audio experience

### 60 Hour Playtime\*

A single charge gives your buds 10 hours of playback, while a fully charged case extends that by another 50 hours

### USB C Charging

Fully charge the magnetic case in under 2 hours with your existing charger or computer port



### ENC

Environmental Noise Cancellation technology suppresses background noises enhancing the clarity of sound

**Sensitive Touch**  
Simple touch controls, easily tap the buds to change the volume, move on tracks and answer calls

**Digital Display**  
Shows battery levels

### CONTENTS

- ANC TWS buds x 2
- Charging case 500mAh
- USB C charge cable
- Silicon rubber ear pieces
- Manual

### SPECIFICATION:

Playback time around 60 hours (includes charging case)  
Dual mics ANC + ENC  
Sweatproof IPX4  
Range up to 10m, Bluetooth V5.3  
Bud size: 25 x 32mm  
Case size: 42 x 58 x 24mm

Charging Port: USB Type C  
Input: DC 5V- 1 Amp  
Case Capacity: 500mAh  
Bud Capacity: 50mAh li-on battery  
Talktime: Around 5 hours  
Standby: 120 hours  
Driver: 13mm

### TROUBLESHOOTING

- **CAN NOT PAIR VIA BLUETOOTH:** Place earphones into the charging case and ensure the buds are fully charged and reconnect
- **DISCONNECTS FROM BLUETOOTH DEVICE:** Ensure you are within 10m uninterrupted range of your device. If within range, disconnect and then reconnect to reset the earphones
- **DEVICE COMPATIBILITY:** Most popular manufacturers devices will work with these earphones, however we can not guarantee all devices are compatible

### IMPORTANT SAFETY PRECAUTIONS:

When using your Rock wireless earbuds & charging case, basic safety precautions should always be followed: Read all the instructions before first use, keep these instructions in a safe place for future reference. Ensure when using these earbuds in any activity to always be aware of your environment such as other people, vehicles and animals. It is not recommended you use these earphones whilst driving. Do not use the product near water and do not put on wet surfaces. To clean use a dry clean cloth. Do not allow children to use this product, this is not a toy and this product contains small parts that can present a choking hazard. Parental supervision is advised. Do not expose this product to excessive heat or fire and do not leave in direct sunlight in case of overheating. Do not expose this product to temperatures above 100°F. Do not attempt to repair this product yourself, contact a qualified service centre if you need to service this product. Do not drop, crush or expose this product to physical force. This product is not intended for commercial use. Please recycle or dispose of this product at its end of life, dispose or responsibly based on your local authorities rules. Contact your local recycling centre of how to dispose of safely as this item does contain a battery.



 
www.ROCKAUDIO.co.uk

# ROCK


ENGLISH

## ACTIVE NOISE CANCELLING EARBUDS ANC + ENC WIRELESS BUDS + MAGNETIC CHARGING CASE INSTRUCTIONS

### IN THE BOX:

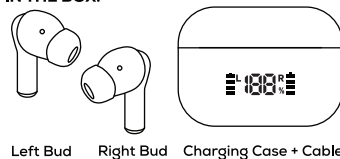


### HOW TO CHARGE THE CASE:

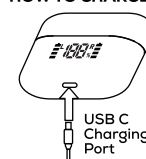 

1. Insert the USB C connector into the base of the charging case and the USB connector into a computer or charging adaptor (not supplied). Charging will take under 2 hours to fully charge from 0%


### HOW TO CHARGE THE BUDS:

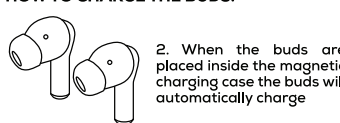 

2. When the buds are placed inside the magnetic charging case the buds will automatically charge


**NOTE:** If your buds are not in the case you can power on the buds by pressing the earpiece for 3 seconds to reconnect to your device and use

### PAIRING THE BUDS:

 


5. Ensure Bluetooth is turned on in your mobile device's settings, then select "Rock ANC" to connect
7. If the earphones are disconnected from your Bluetooth settings for up to 3 minutes they will power off to save the battery

### BUD VOLUME CONTROLS:

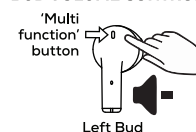 

 
To lower the volume tap the 'Multi function' button **TWICE** on the left bud

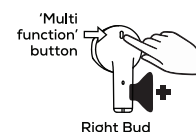


To increase the volume tap the 'Multi function' button **TWICE** on the right bud

**NOTE:** If your earbuds have a low battery, they will emit a beeping sound every minute


### BUD TRACK CONTROLS (functions when playing music):

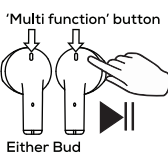 

 To play/pause tap the 'Multi function' button **ONCE**

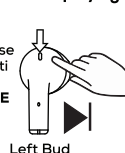


 To go back to the previous track tap the 'Multi function' button **THREE** times on the left bud

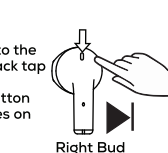


To skip to the next track tap the 'Multi function' button **THREE** times on the right bud

### SIRI/ GOOGLE ASSISTANT CONTROLS:

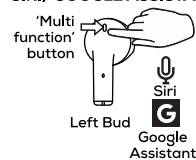 

**PRESS & HOLD** the left bud's 'Multi function' button for 2 seconds to activate or deactivate Siri/Google Assistant


### CALL ANSWERING CONTROLS (functions on incoming calls):

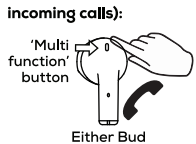 


**TAP** either of the bud's 'Multi function' buttons to answer or hang up a call.

To reject a call **PRESS + HOLD** the bud's 'Multi function' button


### ENC (Environmental Noise Cancellation) + ANC/ ACTIVE NOISE CANCELLING MODE:

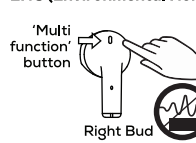 

 To enable **TRANSPARENCY** mode **PRESS + HOLD** the 'Multi function' button on the right bud for 3 seconds

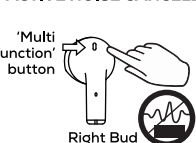

 Once in **TRANSPARENCY** mode **PRESS + HOLD** the 'Multi function' button again on the right bud for another 3 seconds to **activate ANC** mode, you will hear a voice prompt. To turn off repeat the steps above

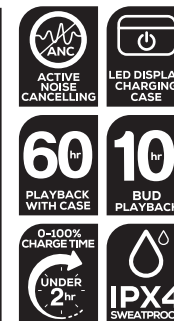

### One year warranty:

This covers the original purchaser and is not transferable. This warranty covers **NORMAL USE**, due to defects in materials or workmanship, your product will be repaired or replaced with one year from purchase. Damages or malfunctions resulting from misuse, tampering, modification and accidents are not covered.



# ROCK

Brandquest UK Ltd  
Middlewich, Cheshire,  
CW10 0GF.  
Designed in the UK.  
Product made in China. Design & specification may be subject to change without prior notice.