

ROCK®

INSTRUCTION MANUAL


ENGLISH



ON-THE-GO WIRELESS PORTABLE MOVE SPEAKER

FUNCTIONS ON THE 'MOVE' SPEAKER

- ① -Volume/-Track
- ② Pause/Play
- ③ +Volume/+Track
- ④ Charging Port
- ⑤ TF Card Slot
- ⑥ Power Button/Mode Button

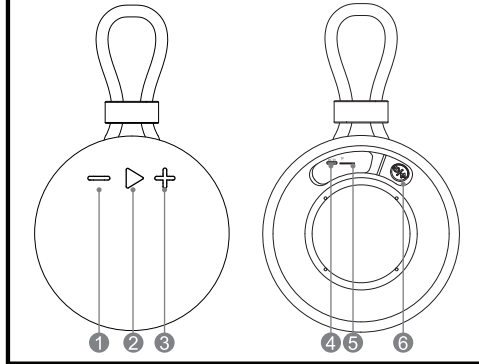

EXTRA SPECIFICATION

- Provides around 4hrs playback on a single charge*
 - Compatible with Apple, Android devices & laptops
 - On body button controls
 - Call Answering, TF card function, FM Function
 - 10m range • Wireless BT V5.2 for better connectivity
 - Adjustable carry loop
 - 0-100% charge in around 120 mins*
 - 52mm driver units provides superior audio quality delivering crystal clear sound
 - Max Output Power: 5W, Input: DC 5V- 1Amp
 - 1200mAh lithium battery
- * Duration of playback may vary due to volume. Times provided are based at 80% volume.

HOW TO USE - Follow diagram for functions

Turning the speaker On/Off
To turn ON or OFF press and hold the 'Power Button'.
ON: The LED will flash blue, the speaker will be ready to pair with your device. Select 'Rock Move' in the Bluetooth menu on your device, once connected the blue LED will remain on.
OFF: The LED will not be visible.

Pair Two Rock Move Speakers
Turn both speakers ON, once ON double press the 'Power Button' on one of the speakers, they will now pair together for TWS (True Wireless Stereo).

Play/Pause
Quickly press this button.

Forward Track
Quickly press '+' button.
Volume Up
Hold and press '+' button.

Rewind Track - Quickly press '-' button.
Volume Down - Hold and press '-' button.

BT/FM Mode: When the speaker is ON press the 'Mode Button'. Press and hold the '▷' to complete an automatic search for FM stations (this may take a while as the speaker searches), to stop the search hold and press '◁'. Once you find a preferred station quickly press the '◀' & '▶' to switch between stations. To control the volume in this mode press and hold the '+' to increase or press and hold '-' to decrease.

TF Card Mode: Insert your TF card in the slot on the rear of the 'Rock Move' speaker now press the 'Mode Button'.

Call Answering/ Call End
Press this button when receiving an incoming call.
Press this button to end a call.

TROUBLESHOOTING

Problems pairing your device wirelessly

- 1 - Turn off both your speaker and mobile device, then restart both then follow the steps to pair again.
- 2 - There maybe a conflict with other wireless devices, turn off all other local wireless devices.

Distortion in sound or quiet audio

- 1 - Check that your speaker battery is not low, recharge fully.
- 2 - Turn up the volume on your mobile device.

Intermittent sound

- 1 - Check you are within 10m range of your mobile device.
- 2 - Check there are no obstacles/barriers between the speaker and your mobile device.

Speaker has frozen

Press and hold the 'Power' button for 10 seconds, this will reset the Speaker. Ensure the speaker is fully charged.

NOTE: Fully charge your speaker before first use. Use the included cable to charge your speaker, connect the cable to a charger, computer or power bank (devices not included). Once charged safely disconnect. A full charge will take around 120 minutes.

IMPORTANT SAFETY PRECAUTIONS: When using your Rock Move Speaker, basic safety precautions should always be followed: Read all the instructions before first use, keep these instructions in a safe place for future reference. Ensure when using this speaker in any activity to always be aware of your environment such as other people, vehicles and animals. Do not use the product near water and do not put on wet surfaces, this speaker is splash proof not waterproof. To clean use a dry clean cloth. Do not allow children to use this product, this is not a toy and this product contains small parts that can present a choking hazard. Parental supervision is advised. Do not expose this product to excessive heat or fire and do not leave in direct sunlight in case of overheating. Do not expose this product to temperatures above 100°F. Do not attempt to repair this product yourself, contact a qualified service centre if you need to service this product. Do not drop, crush or expose this product to physical force. This product is not intended for commercial use. Please recycle or dispose of this product at its end of life, dispose of responsibly based on your local authorities rules. Contact your local recycling centre of how to dispose of safely as this item does contain a battery. **NOTE:** Specifications and images are subject to change without notice.



WIRELESS AUDIO

CONTENTS

- Rock Move Speaker
- USB C charge cable
- Manual

ONE YEAR WARRANTY:

This covers the original purchaser and is not transferable. This warranty covers NORMAL USE, due to defects in materials or workmanship, your product will be repaired or replaced with one year from purchase. Damages or malfunctions resulting from misuse, tampering, modification and accidents are not covered.

ROCK

Brandquest UK Ltd
Middlewich, Cheshire, CW10 0GF.
Designed in the UK.
Product made in China.
Design & specification may be subject to change without prior notice.

www.ROCKAUDIO.co.uk

SCAN ME
FOR MORE
ROCK

